



Copy Audio Function in SD Series V634

The Copy Audio Matrix, located in the Setup Menu, has been designed to serve 2 purposes:-

1. To provide a flexible system for routing input sources from multiple racks to a recording system.
2. To route inputs from one rack to the outputs of another rack without using up console processing resources.

Any input socket connected to a console port can be copied multiple times to any output port socket. One of these “copies” can be nominated as your “Listen Source” for when **Listen to Copied Audio** is activated.

It is also possible to place a copied input socket in “**Listen Safe**” so that when **Listen to Copy Audio** is activated, the original source will be heard rather than the copy source.

Copy Audio settings are not snapshotable and remain constant throughout a session unless they are manually changed by the user.

Setting up the system

In Audio IO, conform all your ports, make any required Optocore output allocations and map your system.

Expanded view of rack outputs

Text/Shading in blue indicates output socket unavailable

Listen To Copied Audio

Set Listen Source

Expanded view of rack inputs

Orange square indicates copied but not set as the Listen Source

Red tick indicates socket is in Listen Safe Mode

Red square indicates copied and set as the Listen Source

Open the Master Screen / Setup / Copy Audio panel and you will see the collapsed matrix with input ports listed down the left side and output ports across the top.

The input port list on the left shows all available input ports that have been configured in Audio IO including Local IO, MADl and Optocore connections. Touching on any of these ports will expand the list to show the individual sockets. If a socket has been routed into an input channel, the channel name will be shown in the “Channel” column.

The output port list across the top shows all available output ports that have been configured in Audio IO. When expanded, any output socket that is already in use or is not allocated to your console is shown in blue and its column highlighted. Existing routes from channels/buss cannot be overwritten in Copy Audio.

If a port is expanded, touching anywhere in the sockets list will collapse that port.

To make a copy route, expand an input port and output port and touch/drag on the grid. You will see the selected cells turn red. This first copy, by default, is defined as your **Listen Source**. Any subsequent copies of the same input socket are shown as orange cells. You may copy an input socket to as many locations as you wish but only one can be defined as your listen source. You can change the defined **Listen Source** by first pressing the “**Set Listen Source**” button in the top left corner of the panel and then touching on cell in the matrix. This cell will turn red and any previously selected listen source cell will turn orange.

If you have used the “**Copy Audio To**” function in the Audio IO Panel and then open the relevant ports in the Copy Audio panel, you will see a diagonal line of Red cells between the source port and the destination port.

If an output socket is being used as a copy destination, this will be indicated in the Audio IO page by card socket number showing red (for a Listen Source) or orange (for a copy) You will also see a red/orange square next to any sockets in use in any channel/buss output routing panel. Please note the copy routes CAN be overwritten by output routes.

Listen Safe

Listen safe is designed to allow the user to “Safe” a channel from the “Listen to Copied Audio” selection. This can be activated from the Copy Audio Panel, the Channel List (when in Edit mode) or any Input Channel Setup Panel. When active, the Input Channel Name box will turn red. As the Listen safe is associated with the input socket, Main and Alt inputs have independent listen safes.